

Construction notes:

- 1) Locate all utilities prior to digging
- 2) Pothole all buried utility crossings
- 3) Restore all surfaces to original or better condition
- 4) Place one 30"x48"x36"
- 5) Place ~830' 24F cable

CenturyLink
425 MONROE ST
ANOKA, MN 55303


ENGINEER: JAMIE POWERS
PHONE: (651) 312-5387
FAX: (763) 712-5023
EMAIL: JAMIE.POWERS@CENTURYLINK.COM

WC: MPGVMNXXA
JOB: N.360085
ISSUE DATE: 08/29/2018

DRAWING SYMBOLS

THE SUBSURFACE UTILITY INFORMATION IN THIS PLAN IS QUALITY LEVEL D. THIS QUALITY LEVEL WAS DETERMINED ACCORDING TO THE GUIDELINES OF CI/ASCE38-2, ENTITLED GUIDELINES FOR THE COLLECTION AND DEPICTION OF EXISTING SUBSURFACE UTILITY DATA.

CALL BEFORE DIGGING
1-800-252-1166

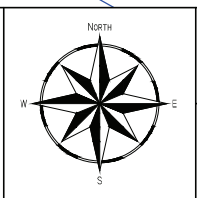

SCALE: N/A
SHEET: 01 OF: 01