



85th Pl



Temp Line →

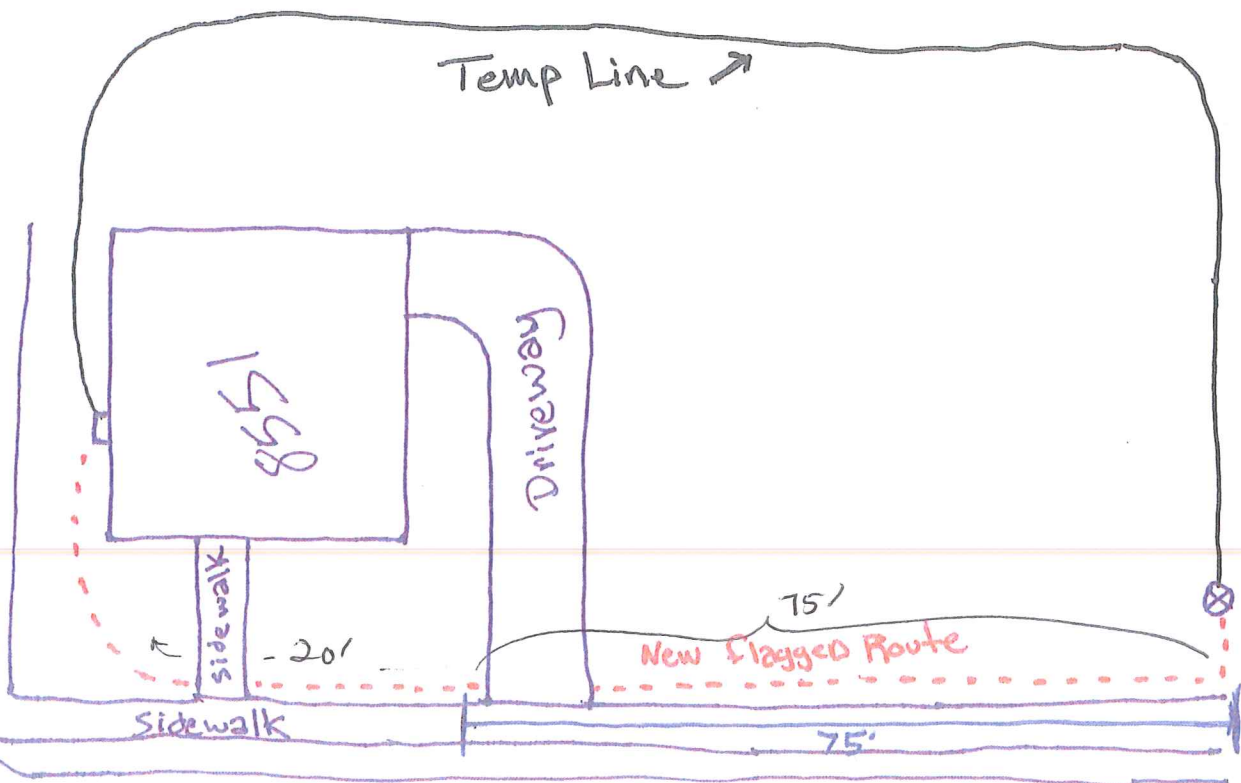

OAKVIEW WAY

at corner  
 Needs Permit  
 by Darwin  
 3' deep  
 soon Drill in the  
 that will be built on  
 far crossing empty lot  
 will need permit  
 8551 oakview hem

Google Maps 8551 Oakview Way N



Imagery ©2018 Google, Map data ©2018 Google 20 ft